


Instructions for mounting smoke detectors


- The smoke detector must be installed on the ceiling at least 50 cm from the wall and 50 cm from lamps.

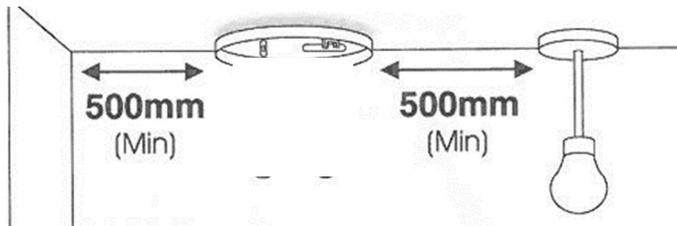


For small rooms, the smoke detector must be installed **at least 50** cm from each wall.

If the room is too small to allow that, the smoke detector must be installed **in the centre** of the room as much as possible, and never less than 30 cm from the wall.

- If the room is adjacent to the bathroom, try to find a location as far away from the bathroom door as possible.
- Clean and degrease the ceiling at the desired position.
- Screw the smoke detector into the baseplate. This activates the smoke detector. The LED should flash once.

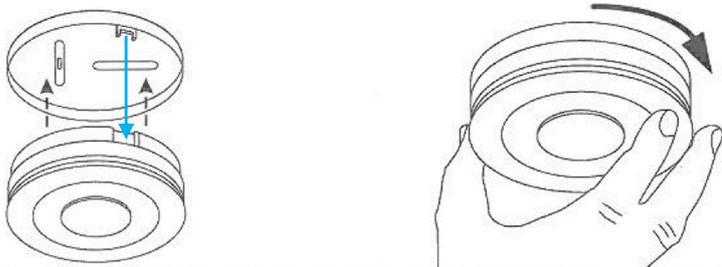

- Remove the red film from the adhesive strips on the back of the baseplate.
- Place the smoke detector in the indicated position and press it against the ceiling **for 20 seconds**.
- After installing the smoke detector, test it once by pressing the test button and holding it for a moment.

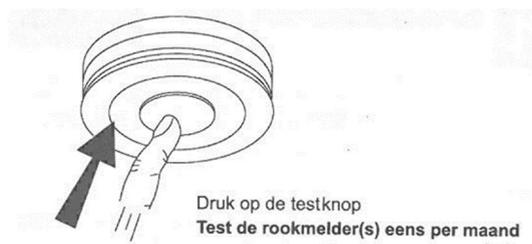

Note:

- If you have a sloping ceiling on the top floor, you can place the smoke detector on the ridge beam (beam at the peak of the ceiling) or about 50 cm from the peak of the ceiling against the sloping part of the roof.
- Attics/lofts without fixed stairs do not require smoke detectors.
- Basements also do not need smoke detectors.
- If you have already installed smoke detectors in the indicated room(s), you can move them to another room for added safety. For more **safety tips**, visit www.brandweer.nl
- **Wonen Limburg's smoke detectors must be installed in the designated areas to comply with legislation.**

